# **OPERATION** Garmin AERA 660

## **DEDICATED PAGE ICONS**

Dedicated Page Icons are located vertically on the right side of the screen in landscape mode or horizontally along the bottom of the screen in portrait mode.











Previous Screen

Main Menu (Touch and Hold)



OR

Cancel map pointer

#### **MAIN MENU**



Touch the following icons to display the associated page or menu:					
1	Мар	Displays the Map View.			
36	Charts	Displays the VFR or IFR charts.			
	3D Vision	Displays 3D Vision.			
+	Nearest	Displays the Nearest Page			
<b>⋄</b> *••	Waypoint	Displays the Waypoint Information.			
WPT & WP2 D WP2 D	Flight Plan List	Displays the Flight Plan List.			
出	Active Flight Plan	Displays the Active Flight Plan.			
+20	Traffic	Displays the dedicated Traffic Page.			
	3D Vision	Displays 3D Vision Page			
*	Terrain	Displays the Terrain View.			
<b>***</b>	Weather	Displays second-level Weather Icons			
×	GPS Info	Displays current position and satellite status.			
	Tools	Displays second-level Tools Icons.			

Touch and hold the licon at any time to display the Main Menu.

#### **NEAREST ICONS**

From the **Main Menu**, touch the icon to access the Nearest Page.

Touch the following Nearest Group Icons to display the associated function:

Airport Displays nearest airpo	ts.
--------------------------------	-----

Airport WX Displays nearest airport weather.

VOR Displays nearest VORs.

Displays nearest NDBs. **NDB Intersection** Displays nearest intersections.

Displays nearest Visual Reporting Point (VRP) (Atlantic). **VRP** 

Displays nearest user waypoints. **User WPT** 

City Displays nearest cities.

Displays nearest ARTCCs (Air Route Traffic Control Centers). ARTCC

Displays nearest Flight Service Stations (FSS). FSS

Displays nearest airspace. **Airspace** 

# **WEATHER ICONS (GDL 39)**

From the Main Menu, touch the Weather icon to access the Weather Page.

Touch the following Weather Group Icons to display the weather product:

**NEXRAD Radar** Displays NEXRAD (NEXt-generation RADar).

**Winds Aloft** Displays Winds Aloft.

**Temps Aloft** Displays Temperatures Aloft.

**METAR** Displays METARs.

**AIRMET** Displays AIRMETs.

**SIGMET** Displays SIGMETs.

Displays TFRs. **TFR** 

**Pilot Reports** Displays PIREPs.

#### **TOOLS**

From the **Main Menu**, touch the **Tools** Icon to access the second-level Tools icons. Touch the following second-level icons to display the associated function:

Touch the following second-level icons to display the associated function:				
10	Setup	Displays third-level Setup Icons.		
R.	User WPT	Displays User Waypoints and Proximity Waypoints.		
•	Flight Log	Displays Flight Logs.		
1	Track Log	Displays Track Logs.		
_	VNAV	Displays Vertical Navigation.		
#	Profile	Displays Aircraft Profiles.		
	E6B	Displays the E6B Calculator.		
-T-	Weight/Bal	Displays the Weight & Balance.		
激	Data Link	Displays Data Link Information.		
8	User Timer	Displays User Timer.		
001011011 10111000 010001101	Database	Displays database and software version information.		

#### SETUP ICONS

From the **Main Menu**, touch the **Tools** > **Setup** to access the third-level Setup lcons.

Displays VIRB Remote Page.

Touch the following third-level icons to perform the associated function:				
	Display	Displays backlight intensity/timeout and color mode settings.		
1	Sound	Displays sound settings.		
10	Units	Displays unit settings.		
1	Time	Displays time settings.		
E.		Distance No. 1 and Administration		

Displays Navigation Map settings. Map

**Position** Displays position settings. Displays interface settings. Interface

**Alarms** Displays alarm settings.

**Airspace** Displays Special Use Airspace alarm settings.

**Data Link** Displays Data Link Information.

**Bluetooth**® Displays Bluetooth connection settings.

**WiFi** Displays WiFi settings.

Power Displays Power Loss Warning settings.

## **OPTION MENUS**

The aera 660 has a dedicated loon that displays a context-sensitive list of menu options available.

#### Navigating the option menu:


1 Touch the Icon

2 Touch the desired menu option.



#### **DATA ENTRY**

The following icons are displayed in the data entry window.

 

Backspace Erases the current data.

Numeric/Alpha Displays the numeric or alpha keypad.

Cancel Cancels a value that has been edited.

#### **Entering alphanumeric data:**

- When alphanumeric data can be entered, a keypad will appear after touching the desired datafield.
- 2 Touch the keypad letters or numbers to enter the desired data.
- 3 Touch Enter.



## **USING MAP DISPLAYS**



Map Panning (Navigation Map)

#### Activating the map pointer:

While viewing a Map Display, touch anywhere on the map to activate the map pointer. Touch the icon to cancel the map pointer.

# Panning the map:

While viewing a Map Display, touch anywhere on the map and drag.

## Reviewing information for a map feature:

While viewing a Map Display, touch anywhere on the map to activate the map pointer. When the Map Pointer is over a map feature, the map feature is highlighted, an information box appears on the map, and the highlighted map feature is displayed on the Map Feature Button. If multiple features are present at the Map Pointer position, green arrows will appear on the Map Feature Button.

- 2 If necessary, touch the buttons to cycle through the list of map features present at that position. Touching the buttons changes the highlight and description.
- 3 Touch the Map Feature Button to review information for the Map Feature.
- If desired touch Direct-to → to navigate to the map feature.



